

## SERVICE INFORMATION:



Service In Canada:  
SMWC / Momentum® Service Centre  
1140 West 7th Avenue  
Vancouver BC V6H 1B4 Canada

Service In The US:  
SMWC / Momentum® Service Center  
264 H Street, Suite D  
Blaine WA 98230 USA

For a Repair Form and the latest address for the Momentum® Service Centre nearest you, (including service in Europe and the United Kingdom), please check our website (under "Service"):

Pour une formule s.a.v. et l'adresse du Centre de Service Momentum® le plus proche de chez vous, (y compris pour le s.a.v. en Europe et en Royaume Unie), veuillez regarder sur notre site web; (sous la rubrique « Service »)

Ein Service-Formular und die Adresse des nächsten Momentum® Service-Centre (auch für Europa und Großbritannien), finden Sie auf unserer Webseite, unter "Service".

[www.momentumwatch.com](http://www.momentumwatch.com)

momentum® by / par / von  
st. moritz watch corp.

**THANK YOU** for purchasing the Momentum® Supernova. This watch has been carefully designed to give you years of reliable service. The design incorporates the latest watchmaking technology and features like our new 'V-Series' movement (offering 4-5 year battery), and solid titanium case. Please let us know if you have any comments or suggestions as to how we might improve our products.

### SETTING THE TIME AND DATE

- 1) Unscrew the crown to 'normal' position. Once unscrewed, pull it out to 1st click position.
  - 2) Turn the crown clockwise until the previous day's date appears. (Note: Do not set the date between 9:00 PM and 1:00 AM. Otherwise, the date may not change properly.)
  - 3) Pull crown out to the 2<sup>nd</sup> click position when the Second hand is at the 12 o'clock position. (Note: If the alarm has been set and the crown is pulled out to the 2nd. click position, the Alarm hands will turn to indicate the current time.)
  - 4a) Turn to set the Hour and Minute hands.
  - 4b) Turn clockwise to advance the Hour and Minute hands past 12:00 AM. Doing so will advance the date to the current date.
  - 4c) Set the Hour and Minute hands to the desired time taking AM or PM into consideration.
  - 5) Push crown back to normal position.
- NOTE: If you set the watch after 12 o'clock noon, make sure you turn the hands around the dial and past 12 o'clock (noon) to set the PM time. If you do not do this, the date will change at noon, instead of midnight.

### ALARM FEATURE

The alarm feature on this model is a 'single time' alarm. It can be set to ring only once at a designated time within the coming 12 hours. The alarm time can be set in one minute increments.

### HOW TO SET THE ALARM

- Before using the alarm, check that the Alarm hands are adjusted to the current time.
- Note: If the Alarm hands are not adjusted to the current time, follow the procedure in "Alarm Hand Position Adjustment".
- 1) Unscrew the crown to 1st click position.
  - 2) Press button "A" repeatedly to set the Alarm hands to the desired alarm time.
- Tip: The alarm hands move quickly if button 'A' is



### Sport Watch With Date and Alarm (with Screw-Crown)

2/4/6 Year Warranty & Operating Instructions

- pressed and held.
- 3) Press in and screw in the crown firmly. The alarm is now engaged.

The single-time alarm cannot be set for a time more than 12 hours ahead of the current time. While you keep button "A" pressed to advance the Alarm hands quickly, they stop when they indicate the current time and the alarm is disengaged. In that case, release button "A", and then, press and hold the button again to set the Alarm hands to the desired time.

While the crown is at the normal position, the Alarm hands indicate the current time when the alarm is disengaged and the designated alarm time when it is engaged.

### HOW TO STOP THE ALARM

At the designated time the alarm rings for 20 seconds and then automatically disengages as it stops. To stop it manually, press button 'A'. Note: While the alarm is ringing, pressing button 'A' will stop the alarm.

### HOW TO CANCEL THE ALARM TIME YOU HAVE SET

- 1) Unscrew the crown out to 1<sup>st</sup> click position.
- 2) Press and hold button "A" until Alarm hands stop and indicate the current time. Tip: The alarm hands move quickly if button 'A' is pressed and held.
- 3) Press in and screw in the crown firmly. The alarm is now cancelled.

### ALARM HAND POSITION ADJUSTMENT

- Set the Alarm hands to the time the main time hands indicate. Before using the alarm, check that the Alarm hands are adjusted.
- 1) Unscrew the crown out to the 2<sup>nd</sup> click position when the Second hand is at the 12 o'clock position. (Note: If the alarm has been set and the crown is pulled out to the 2nd click position, the Alarm hands will turn to indicate the current time.)
  - 2) Press button "A" repeatedly to set Alarm hands to the time the main time hands indicate. Tip: The alarm hands move quickly if button 'A' is pressed and held.
  - 3) Press in and screw in the crown firmly.

### BATTERY LIFE INDICATOR

When the battery nears its end, the second

Please read instructions carefully to understand how to operate your Momentum® watch. **Your model may not have all of the features described in this booklet.**



**ATTENTION:** Your watch is equipped with a screw-down crown system for maximum water-resistance. Please refer to your warranty / manual for important information about this feature.

hand moves at two-second intervals instead of normal one-second intervals. If this happens, have the battery replaced by sending it to the appropriate Momentum® Service Centre. Note: While the second hand is moving at two-second intervals, the alarm will NOT ring even if it is engaged. This is not a malfunction. The watch remains accurate while the second hand is moving at two-second intervals.

### NIGHT- READING

Your watch employs an amazing new luminous material called BLACKOUT SUPERLUMINOUS. This technology allows you to read your watch at night, without pushing any buttons, so you do not need to use two hands. Just glance at your watch and read the time. Completely non-radioactive, BLACKOUT SUPERLUMINOUS functions by charging from ambient light. The brighter the light, the faster and more powerful the "charge". When new, we recommend you set it in direct sunlight for 30 minutes to charge it up for maximum effect, but normal room lighting will generally charge your watch enough to be legible for several hours.

### WATER PROTECTION

The Supernova ti is designed as a rugged sports watch. Each watch is water-resistant tested to 10 ATM (330 FT) and can be immersed in water, provided the crown is correctly pushed in. If the watch is regularly serviced and maintained, you can wear it in the shower, swimming, kayaking, etc., without worry.

### CHOOSING THE RIGHT BAND

While leather bands are extremely comfortable, immersing them in water on a regular basis will make even the finest leather band wear out quickly, so we recommend a natural rubber if you plan to routinely immerse the watch in water. To find out which band options are available for your watch, please contact our customer service department at 1-800-663-1881 or email us at: [watches@momentumwatch.com](mailto:watches@momentumwatch.com)

### CRYSTAL

Your watch is fitted with a heat-tempered mineral crystal. Please note that while glass is heat-hardened, an impact with a hard or sharp object can scratch the crystal, or crack or shatter it. If this happens, return the watch to one of our Service Centers and the crystal can be replaced for a moderate charge. (Scratches and impact damage are not covered under warranty.) A completely scratchproof sapphire crystal (now standard on S-Series models) is available at extra cost from our Service department.

### TEMPERATURE CARE

Avoid temperature extremes. Exposing your watch to high temperatures, such as placing it on the dashboard of a vehicle or use in a jacuzzi or hot tub may cause the watch to malfunction, shorten battery life, or

### USING THE SCREW CROWN (C):

Your watch is equipped with a screw-down, locking crown "C". This screws into the case, to ensure a reliable water tight seal. To set your watch, you must first unscrew the crown by turning it counter-clockwise 3-4 turns, then pull out gently from the case for setting. After setting or resetting the watch, you will need to screw the crown back in, by pressing it firmly against the case (it is spring-loaded) and simultaneously turning it in a clockwise direction. Then, taking care not to force or cross-thread the crown, turn it until it is snug against the case and finger-tight. It is absolutely essential that the screw down crown is fully closed before using your watch in or around water and we recommend that this is checked prior to contact with water. Any warranty whatsoever will be invalidated if this vital procedure is not adhered to. Watches returned within the warranty period that have suffered from water penetration will be pressure tested to check the effectiveness of the screw down crown.

cause deformations of certain components leading to mechanical failures. Leaving the watch in extreme cold temperatures may cause irregular time keeping until the watch returns to normal operating temperatures. For these reasons, you should remove your watch prior to exposure.

### TWO YEAR WARRANTY

Great care has been taken to ensure that your watch will give you many years of reliable service. It is guaranteed for two years against any defect caused by a fault in its manufacture\*. **Please retain your purchase receipt as proof of warranty.** The best possible materials and components have gone into your watch. To keep it in top condition, please treat it with care and have it professionally serviced at regular intervals.

\* Loss or damage caused by accident, negligence, or opening, repair by unauthorized persons is excluded from this warranty, as is cosmetic deterioration of the case or bracelet caused by wear & tear or abuse and damage caused by cracked or broken crystals. Battery life is not covered under warranty. Moisture damage caused by failure to push in the crown correctly is also not covered under warranty.

### 2/4/6 YEAR EXTENDED WARRANTY

Please retain your purchase receipt for proof of warranty. After the initial 2-year warranty expires, we recommend that you extend your warranty by sending your watch to a St. Moritz / Momentum® Service Centre for a Full Service\*. This is a chargeable service which includes: battery replacement, cleaning, lubrication, and accuracy tuning of the movement as required, lubrication or replacement of all seals, pressure testing to original specification, return shipping and insurance (within Canada and the US only), and a 2 year warranty extension. After 4 years, send it in for another Full Service and extend the warranty for a final two years (for a total of 6 years from original purchase date). Nobody knows your watch like we do! Expert technicians, original parts and the latest equipment will ensure that your watch is serviced right.

**IF YOUR WATCH REQUIRES SERVICE, REPAIR, OR BATTERY CHANGE** please return it to the appropriate Momentum® Service Centre. Our Service Centres can provide repairs, service, and replacement bands, promptly and at reasonable prices. For the most current Service Centre addresses and to download the Service and Repair form, please visit our website at: [www.momentumwatch.com](http://www.momentumwatch.com).

Questions?  
1-800-663-1881  
(Weekdays, 9am-5pm Pacific time)

