

Questions?  
1-800-663-1881  
(weekdays, 9am-5pm Pacific Time)  
(lun-ven, 9 h-17 h, heure du pacifique)  
www.momentumwatch.com

Service In Canada:  
St. Moritz Service Centre  
1140 West 7th Avenue  
Vancouver BC V6H 1B4 Canada

Service In The US:  
St. Moritz Service Center  
264 H Street, Suite D  
Blaine WA 98230 USA

For current service centre addresses,  
please visit our website at:  
www.momentumwatch.com

Pour l'adresse du centre de service le  
plus proche, voir:  
www.momentumwatch.com

Die Adresse des nächsten Service-  
Centre, finden Sie unter:  
www.momentumwatch.com

IMPRIME AU CANADA  
PRINTED IN CANADA

 MOMENTUM®



**SLK ti CHRONOGRAPH**

Dive Watch with Day & Date  
Montre étanche avec date et chronographe  
Uhr mit Tag und Datum

2/4/6 Year Warranty & Operating  
Instructions

Garantie 2/4/6 ans & modes d'emploi

Gebrauchsanleitung und 2/4/6 Jahre  
garantie

momentum® by / par / von  
st. moritz watch corp.

Please read instructions carefully to understand how to operate your Momentum® watch. Your model may not have all of the features described in this booklet.

Veillez lire attentivement les modes d'emploi pour bien comprendre le fonctionnement de votre montre Momentum®. Toutes les fonctions décrites ne sont pas disponibles sur tous les modèles.

Lesen Sie bitte diese Anleitung für Ihre Momentum®-Uhr genau durch. Es ist möglich, daß Ihr Modell nicht alle in dieser Gebrauchsanweisung beschriebenen Funktionen aufweist.

**Thank you** for your purchase. This quartz-digital watch has been carefully designed to give you years of reliable service. Its design incorporates the latest watchmaking technology. Please let us know if you have any comments or suggestions as to how we might improve our products.

**THE MODE BAR**

The key to using your watch is the mode bar (the bar across the middle of the display). This tells you what mode your SLK is in. Switch modes by pressing the Mode button (M).

**THE NORMAL MODE**

For everyday use. In this mode the time is displayed in the upper display and the date in the lower display. (In all other modes, the time is displayed in the lower display). In the Normal Mode, any special function, which is active, will show with a solid underline in the Mode bar. (CHI: to arm the Chime so your watch sounds a reminder chime every hour on the hour, in the Normal mode, press S and R simultaneously. To disarm, press both buttons again.)

**TO SET TIME AND DATE**

Press and hold S for 3-4 seconds until the seconds flash, then press R to reset seconds. Each successive press of S will cause minutes; hours; month; date; day; and 12H/24H to flash. Press R at any time to reset whatever is flashing. SPECIAL TIMING MODES

The SLK offers many special timing functions. To switch to a special mode, press M until a flashing underline appears below the appropriate symbol on the mode bar:

- AL-1 ALARM 1
- AL-2 ALARM 2
- CHI HOURLY CHIME
- STP STOPWATCH
- TMR COUNTDOWN
- DUAL DUAL TIME



**AL-1:** This is your main alarm (e.g. regular daily wake-up alarm) To use: Switch to the AL-1 mode. Press R to switch OFF. Press R again to switch ON. After 60 seconds, the watch automatically returns to the Normal mode. In this mode, if the alarm is armed, it will show with a solid underline in the mode bar. When the alarm beeps, press any button to turn off.

To set: Switch to the AL-1 mode, then press S for 2-3 seconds until minutes flash, then press R to set minutes. Press S again: hours will flash. Press R to set hours. \*\*Note: ensure you set the alarm correctly to AM or PM

**AL-2:** This is a secondary alarm you can use, without having to reset AL-1 For use and setting, select AL-2, then use and set as AL-1 above.

**CHI:** See Normal Mode (above).

**STP:** The stopwatch or chronograph is used to time events, with CUM/SPLIT times if required.

To use: Switch to the STP mode. Press S to start timing. Press S again to stop.

**Spl:** To take an intermediate (CUM-Split) time, press R while the stopwatch is running. (SPL will flash at upper right of display). After 10 seconds, split-time releases and re-joins running time (or press R again to release immediately.)

**Reset:** Stop the timing by pressing S. When the stopwatch is stopped, press R to reset the stopwatch to 00'00"00. **Range:** The stopwatch has a timing range of 24 hours with automatic rollover. It will display times to 1/100-second resolution for the first hour, with 1-second resolution thereafter.

[MM, SS, 1/100 (minutes, seconds, 1/100 seconds) until 59'59"99, then HH, MM, SS until 23'59"59.]

**TMR:** The countdown timer counts down from a pre-set time, with an alarm at 00'00".

To use: switch to the TMR mode. (The preset "start" time shows, flashing, in the smaller digits at upper right). Press S to begin counting down. You may start and stop the countdown by pressing S again during the countdown. At the end of the countdown, the alarm will sound for 10 seconds, then the watch will automatically reset to the preset start time. If you wish to restart the countdown (e.g. yachting false-start): press S to stop the countdown, then press R once to reset the TMR to the pre-set time. Press S to restart the countdown; there is no need to re-program the "start" time.

To Set: Reset the "start" time by pressing R. Each press will move the start time down by 1 minute; or hold down R for speed-setting. The start time can be set in increments of 1 minute from 99'00" down to 1'00".

**DUAL:** The dual time zone feature allows you to view local and distant time simultaneously.

To use: Switch to DUAL mode. You will

see local time on the lower display, and distant time on the upper display. Note that the distant time is always in 24H style to avoid confusion. Also note that alarms, chime, etc., will be synchronized with the local time, not distant time.

**LIGHT:** The SLK features our Power-Glo backlight system. Press L at any time and the whole display is brightly back-lit, making the SLK easy to read, even in absolute darkness.

**CHOOSING THE RIGHT BAND**

A selection of alternate bands are available to fit your watch: these may include natural rubber, polyurethane, various styles of high quality leather bands, or a matching metal bracelet. If you would like to order an alternate band for your watch, please contact your dealer, or our Service Centre, or visit www.momentumwatch.com

**CRYSTAL**

Most of our watches are fitted with a heat-tempered mineral crystal. Please note that while this glass is heat-hardened, an impact with a hard or sharp object can scratch the crystal, or crack or shatter it. If this happens, return the watch to one of our Service Centers, where the crystal can be replaced for a moderate charge. (Scratches and impact damage are not covered under warranty.) A virtually scratch proof sapphire crystal is standard on all S-Series models and is available at extra cost for many other models. Please check with our Service Department.

**TEMPERATURE CARE**

Avoid temperature extremes. Exposing your watch to high temperatures, such as placing it on the dashboard of a vehicle or use in a jacuzzi or hot tub may cause the watch to malfunction, shorten battery life, or cause deformations of certain components leading to mechanical failures. Leaving the watch in extreme cold temperatures may cause irregular time keeping until the watch returns to normal operating temperatures. For these reasons, you should remove your watch prior to exposure.

**TWO YEAR WARRANTY**

Great care has been taken to ensure that your watch will give you many years of reliable service. It is guaranteed for two years against any defect caused by a fault in its manufacture\*. Please retain your purchase receipt as proof of warranty. The best possible materials and components have gone into your watch. To keep it in top condition, please treat it with care and have it professionally serviced at regular intervals.

\* Loss or damage caused by accident, negligence, or opening, repair by unauthorized persons is excluded

from this warranty, as is cosmetic deterioration of the case or bracelet caused by wear & tear or abuse and damage caused by cracked or broken crystals. Battery life is not covered under warranty. Moisture damage caused by failure to screw in the crown correctly is also not covered under warranty.

**2/4/6 YEAR EXTENDED WARRANTY**

Please retain your purchase receipt for proof of warranty. After the initial 2-year warranty expires, we recommend that you extend your warranty by sending your watch to a St. Moritz / Momentum® Service Centre for a Full Service\*. This is a chargeable service which includes: battery replacement, cleaning, lubrication, and accuracy tuning of the movement as required, lubrication or replacement of all seals, pressure testing to original specification, return shipping and insurance, and a 2 year warranty extension. After 4 years, send it in for another Full Service and extend the warranty for a final two years (for a total of 6 years from original purchase date). Nobody knows your watch like we do! Expert technicians, original parts and the latest equipment will ensure that your watch is serviced right. To check current Full Service pricing please visit our website at: www.momentumwatch.com

\* Full Service Packages include a extension of the original warranty, for as long as parts are available. Please note however that a Full Service for older, discontinued models may not include an extension of the warranty, if original parts are in limited supply or unavailable. Please check with our Customer Service Department for to confirm whether any non-current models qualify for the extended warranty.

IF YOUR WATCH REQUIRES SERVICE, REPAIR, OR BATTERY CHANGE please return it to the appropriate SMWC Service Centre as shown in this manual. Our Service Centres can provide repairs, service, and replacement bands, promptly and at reasonable prices. For the most current Service Centre addresses and to download the Service and Repair form, please visit our website at:

www.momentumwatch.com

Questions?  
1-800-663-1881

(Weekdays, 9am-5pm Pacific time)  
[TECHNICAL NOTE: extreme shocks may cause a safety "breaker" to blank-out the display on your watch. If this happens, clear by pressing all 4 buttons at once, then press R and reset the time. If the watch does not clear, return it to our Service Center and we will reset it for you at no charge.]